



Setting Up The Hardware


Connecting The Hardware

Connecting the Printer Power Cord

1. Plug the Printer Power Cord into the Back of the Printer



This is the Plug for the Printer's Power Cord

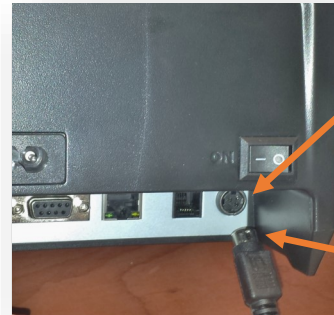

This is the Port for the Printer's Power Cord

The Printer's Power Cord

2. Plug in the Other End of the Printer's Power Cord into A Power Outlet

Connecting the Printer to the 14" Tablet




This is the Plug on the Back of the Printer for the USB Connection to the Tablet



This is the Plug on the Side of the Tablet for the USB Connection to the Printer

Connecting the Cash Drawer to the Printer

1. Plug in the Cash Drawer's Cord into Printer
(Cash Drawers Cord is Already Attached to Cash Drawer)

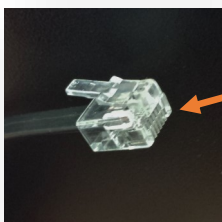

Cash Drawer's Plug that Needs To be Plugged into The Printer



Cash Drawer's Cord

Where You Connect the Cash Drawer's Cord into the Printer

